

PRIMARE APP

User Guide – Android

CONTENTS

USING THE PRIMARE APP	4
Installing the Primare App	4
Connecting to the MM30, NP30, or PRE60	4
Selecting a source	4
Browsing tracks	5
Using the Playqueue	5
Play screen	6
Info screen	6
SELECTING A SOURCE	7
Playing music from internet radio	7
Playing music from a network shared music source	7
Playing music from a USB drive	7
Playing music from an iPod	8
Playing music from a digital or analogue input	8
Playing music from a PC/Mac	8
CONFIGURING SETTINGS	9
Settings screen	9
Application Settings	9
Device Settings	9
Network	10
IP Configuration	10
WiFi Configuration	10
INDEX	11





USING THE PRIMARE APP



INSTALLING THE PRIMARE APP

The Primare App is available for free download from the Play Store on your Android Phone or Tablet.

The Primare App provides the following screens which you can select by touching one of the icons at the top of every screen:

	Displays the Select Source screen to allow you to select a source
	Displays the Browse screen to allow you to browse for media on the selected source.
	Displays the Play screen to allow you to control playback of the music in the queue.
	Displays the Settings screen to allow you to see or change the Primare App settings.



CONNECTING TO THE MM30, NP30, OR PRE60

 
When you first launch the Primare App it will automatically search for UPNP devices on the network, and display a list.

- Touch the device you want to connect to.

It will subsequently connect to this device automatically.

To connect to a different device on the network

- Touch the **Settings** icon, then touch **Discover Devices**.
- Touch the device you want to connect to.

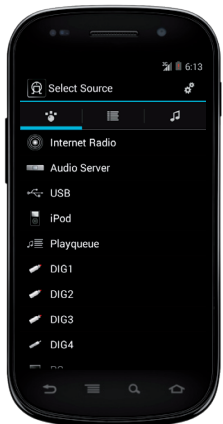

SELECTING A SOURCE

 
The **Select Source** screen allows you to select the music source:

- Internet Radio** Selects internet radio.
- Audio Server** Shows any network shared music sources.
- USB** Plays music from a USB drive attached to the USB-A input.
- iPod** Plays music from an iPod connected to the USB-A input.
- Playqueue** Displays the Playqueue.
- DIG1 etc** Selects a digital input. These can be renamed.
- PC** Plays music from a PC/Mac connected to the USB-B input.
- IN1 etc** Selects an analogue input. These can be renamed.
- My Files** Plays music from your device over Wi-Fi.


To rename a digital or analogue source

- Press and hold the source you want to rename.

The following dialog box is displayed:



 - Touch **Rename**.
- Enter the new name and touch **OK**.

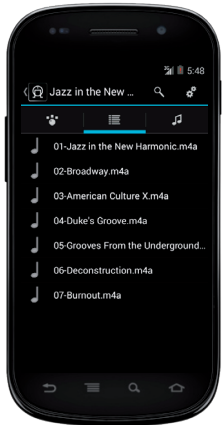

BROWSING TRACKS

The **Browse** screen shows the folders and tracks on the selected device.

 
Note that you cannot browse on the Digital or Analogue inputs, or the PC source, since no track information is available.

To play tracks

- Touch a track to play it immediately.

To queue tracks

- Drag a track right, or press and hold a track, to display the **Choose Action** dialog box to allow you to choose what to do:

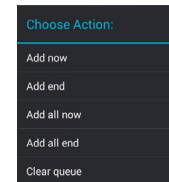

- Add now** Adds the track in place of the currently playing track.
- Add end** Adds the track to the end of the Playqueue.
- Add all now** Adds all the tracks in place of the currently playing track.
- Add all end** Adds all the tracks to the end of the Playqueue.
- Clear queue** Clears the Playqueue.

To navigate back to the previous folder

- Touch the Primare icon at top left of the screen:

 


To search for tracks

- Touch the Search icon:



The Search dialog box is displayed:

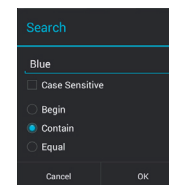

- Enter the text you want to search for.
- Touch **Contain**, then **OK**.

A list of matching tracks will be displayed.



 
USING THE PLAYQUEUE

- Touch **Playqueue** on the **Select Source** screen.

The **Playqueue** screen displays the list of tracks queued to play, and allows you to edit them. The currently playing track is indicated by a ► icon.

To clear or save the queue

- Press and hold **Playqueue** on the **Select Source** screen.



- Touch **Clear Queue** to clear the queue, or **Save Queue as** to save it.

To edit the Playqueue

- Touch the **Edit Queue** icon:



 
- Drag a track by the **Reorder** icon to move it in the Playqueue:



- Touch the **Delete** icon to delete a track from the Playqueue:



- Touch the **Edit Queue** icon again to finish.

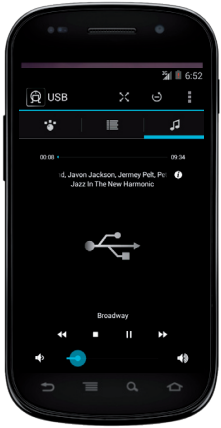


PLAY SCREEN

The **Play** screen allows you to control playback of the music in the queue.

- Touch the **Play Screen** icon:



 - Touch **◀◀** or **▶▶** for the previous or next track. Press and hold for fast backwards or forwards.

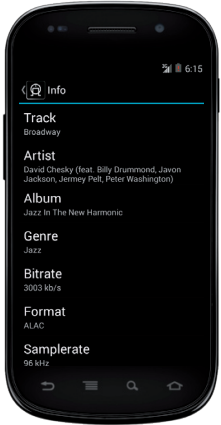

INFO SCREEN

The **Info** screen displays detailed information about the currently playing track.

To display the Info screen

 
- Click the Info icon on the **Play** screen:



To change the volume

- Drag the volume slider at the bottom of the Play screen.
- Tap the loudspeaker icons for small volume steps.

SELECTING A SOURCE

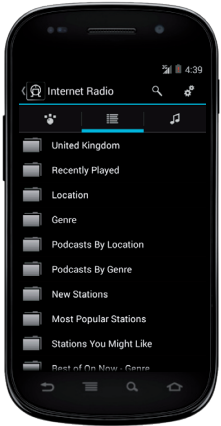

PLAYING MUSIC FROM INTERNET RADIO

- Touch **Internet Radio** on the **Select Source** screen.

You can now browse a directory of stations, organised by location, genre, and popularity.

To create a list of favourites

- On the **Internet Radio** screen touch **Get access code**, and note down the code.

- Connect to:

<http://primare.vtuner.com/setupapp/primare/asp/authlogin/RegForm.asp?ngy=eng>

- Follow the instructions to activate your account.

- Select your own Favorites.

Your favourites will appear in a folder on the Internet Radio screen called ***My Favorites***.

To add a station that is not on the list

Enter the following information:

Station name

Station URL, for example, <http://62.168.116:8000/dsp1>

Location, for example Germany.

Genre, for example Classical

Type, for example MP3

 


PLAYING MUSIC FROM A NETWORK SHARED MUSIC SOURCE

- Touch **Audio Server** on the **Select Source** screen.

Each network shared music source will be displayed as a folder, and you can browse for the music you want to play.

See *Browsing tracks*, page 5, for information about browsing and searching for music on a network shared music source.

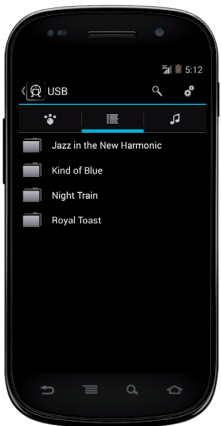


PLAYING MUSIC FROM A USB DRIVE

- Touch **USB** on the **Select Source** screen.

The music on the USB drive will be displayed as a list of folders, and you can browse for the music you want to play.

 See *Browsing tracks*, page 5, for information about browsing and searching for music on a USB drive.

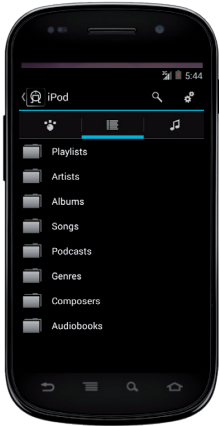


PLAYING MUSIC FROM AN IPOD

- Connect the iPod, iPhone, or iPad to the USB-A input on the MM30, NP30, or PRE60, using an iPod USB lead.

You can then browse through the music on the iPod and select what you want to play.

See *Browsing tracks*, page 5, for information about browsing and searching for music on an iPod.

 My Files on the **Select Source** screen will show the music on your device and allow you to play it over Wi-Fi.

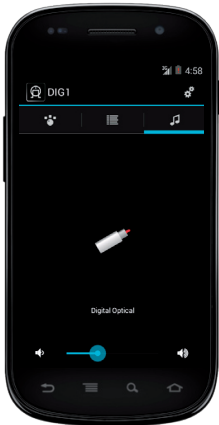

PLAYING MUSIC FROM A DIGITAL OR ANALOGUE INPUT

- Connect the source to the appropriate digital or analogue input on your preamplifier.
- Touch the entry corresponding to the input on the **Select Source** screen.

You can now play music from the chosen input.



PLAYING MUSIC FROM A PC/MAC

On a PC:

- Install the Primare PC audio driver from the support section on: www.primare.net

 
No driver is needed on a Mac.

- Connect the PC/Mac USB connector to the USB-B input on the MM30, NP30, or PRE60, using a USB-A to USB-B lead.
- Select **XMOS USB Audio 2.0** in the **Sound Output** Control Panel or System Preferences panel.

- Touch **PC** on the **Select Source** screen.

You can now play music from your PC/Mac, using the MM30, NP30, or PRE60 as the soundcard of your PC/Mac.

CONFIGURING SETTINGS

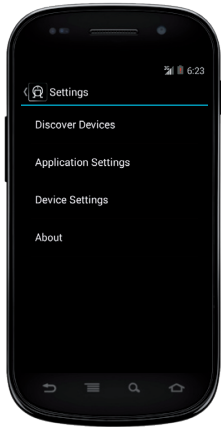


SETTINGS SCREEN

The **Settings** screen allows you to see or change settings.

- Touch the **Settings** icon:



 
- Discover devices** Searches for UPnP devices on the network.
- Application Settings** Specifies settings for the Primare App; see below.
- Device Settings** Allows you to configure the MM30, NP30, or PRE60; see below.
- About** Displays the Primare App version information.

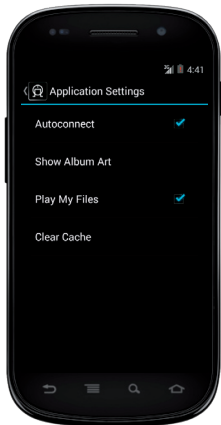

APPLICATION SETTINGS

The **Application Settings** screen provides the following Primare App settings:

 - Autoconnect** Specifies whether to connect automatically to the last device.
- Show Album Art** Specifies when to show album art for tracks.
- Play My Files** Shows the **My Files** folder.
- Clear Cache** Clears the stored album art.

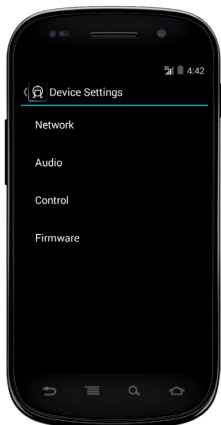

DEVICE SETTINGS

 
The **Device Settings** screen provides the following MM30, NP30, or PRE60 settings:

- Network** Allows you to configure the Ethernet and Wi-Fi settings.
- Audio** Allows you to specify the maximum and default volume.
- Control** Allows you to specify the IR Input location.
- Firmware** Displays the firmware information, and allows you to check for and install updates.


To choose when album art is displayed

- Touch **Show Album Art** on the Application Settings screen.

The following dialog box will be displayed:

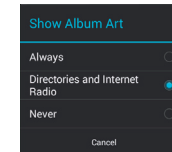

 
- Touch **Always** to show album art for tracks on all devices, **Directories and Internet Radio** to show album art for the **Internet Radio** and **Audio Server** options only, and **Never** to disable album art.

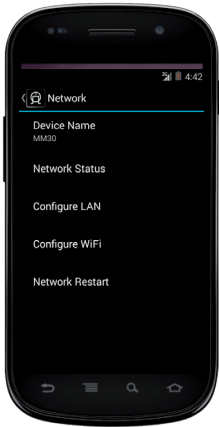

NETWORK

The **Network** screen provides the following MM30, NP30, or PRE60 settings:

 
- Device Name** Allows you to assign a name to your Primare device.
- Network Status** Displays a summary of the current network settings.
- Configure LAN** Displays the **IP Configuration** screen to allow you to configure the Ethernet settings; see below.
- Configure WiFi** Displays the **WiFi Configuration** screen to allow you to configure the Wi-Fi settings; see below.
- Network Restart** Restarts the MM30, NP30, or PRE60 following a change to the network settings.

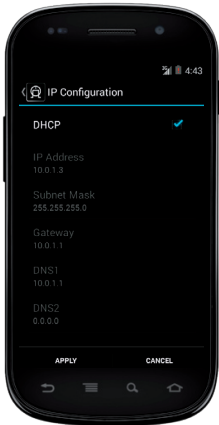

IP CONFIGURATION

The **IP Configuration** screen provides the following MM30, NP30, or PRE60 settings:

 - DHCP** Enables or disables DHCP for the device. If DHCP is enabled, the other settings will be managed automatically by the network protocol.
- IP Address** The IP address of the MM30, NP30, or PRE60.
- Subnet mask** The IP Subnet Mask.
- Gateway** The static default gateway address.
- DNS1** The static primary Domain Name Server.
- DNS2** The static secondary Domain Name Server.

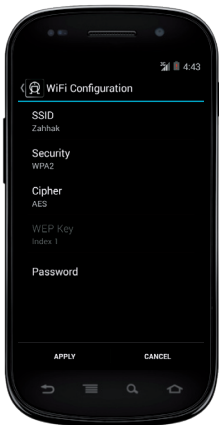

WIFI CONFIGURATION

The **WiFi Configuration** screen provides the following MM30, NP30, or PRE60 settings:

- SSID** The name of your wireless network.
- Security** The type of wireless encryption used by the system. The options are: None, WEP, WPA, or WPA2.
- Cipher** The type of WPA encryption that is used. The options are TKIP, AES, or TKIP/AES.
- WEP key** The WEP key value to use. Only used in combination with security setting WEP.
- Password** The WiFi password.

INDEX

A

Album art, showing 9
Analogue input 8
Application Settings 9
Audio Server 7
Audio settings 9
Autoconnect 9

B

Browsing tracks 5

C

Cipher 10
Clear Cache 9
Clearing the Playqueue 5
Connecting 4
Control 9

D

Default volume 9
Device Settings 9
DHCP 10
Digital input 8
DNS servers 10

F

Favourites, creating 7
Firmware 9

G

Gateway 10

I

Info screen 6
Inputs, playing music from 8
Installing 4
Internet Radio 7
IP Address 10
IP Configuration 10
iPod 8

M

Maximum volume 9
My Files 4, 8

N

Network 10
Network shared music source 7

P

Password 10
PC/Mac, playing music from 8
Play My Files 9
Playqueue
 Adding tracks 5
 Clearing 5
 Editing 5
 Saving 5
Play screen 6

Q

Queuing tracks 5

R

Renaming a source 4

S

Saving the Playqueue 5
Searching for tracks 5
Security 10
Selecting a source 4
Settings screen 9
Show Album Art 9
Sources
 Renaming 4
SSID 10
Station, adding 7
Subnet mask 10

T

Tracks
 Browsing 5
 Information 6
 Queuing 5
 Searching 5

U

USB drive 7

V

Volume, changing 6

W

WEP key 10
WiFi Configuration 10



PRIMARE

PRIMARE AB
LIMSTENSGATAN 7
SE-21 616 LIMHAMN
SWEDEN
PRIMARE.NET