

# PRIMARE APP

User Guide – iOS



# CONTENTS

<b>USING THE PRIMARE APP</b>	<b>4</b>
Installing the Primare app	4
Connecting to the MM30, NP30, or PRE60	4
Selecting a source	4
Browsing tracks	5
Using the Playqueue	5
Play screen	6
Info screen	6
<b>SELECTING A SOURCE</b>	<b>7</b>
Playing music from internet radio	7
Playing music from a network shared music source	7
Playing music from a USB drive	7
Playing music from an iPod	8
Playing music from a digital or analogue input	8
Playing music from a PC/Mac	8
<b>CONFIGURING SETTINGS</b>	<b>9</b>
Settings screen	9
Application Settings	9
Device Settings	9
Network	10
IP Configuration	10
WiFi Configuration	10
<b>INDEX</b>	<b>11</b>

# USING THE PRIMARE APP



## INSTALLING THE PRIMARE APP

The **Primare** app is available for free download from the App Store on your Android Phone or Tablet.

The **Primare** app provides the following screens which you can select by touching one of the icons at the top of every screen:

	Displays the <b>Select Source</b> screen to allow you to select a source
	Displays the <b>Browse</b> screen to allow you to browse for media on the selected source.
	Displays the <b>Play</b> screen to allow you to control playback of the music in the queue.
	Displays the <b>Settings</b> screen to allow you to see or change the Primare App settings.



## CONNECTING TO THE MM30, NP30, OR PRE60

 
When you first launch the Primare App it will automatically search for UPnP devices on the network, and display a list.

- Touch the device you want to connect to.

It will subsequently connect to this device automatically.

### To connect to a different device on the network

- Touch the **Settings** icon, then touch **Discover Devices**.
- Touch the device you want to connect to.

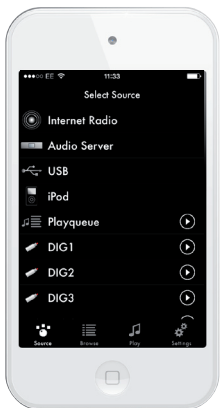

## SELECTING A SOURCE

 
The **Select Source** screen allows you to select the music source:

- Internet Radio** Selects internet radio.
- Audio Server** Shows any network shared music sources.
- USB** Plays music from a USB drive attached to the USB-A input.
- iPod** Plays music from an iPod connected to the USB-A input.
- Playqueue** Displays the Playqueue.
- DIG1 etc** Selects a digital input. These can be renamed.
- PC** Plays music from a PC/Mac connected to the USB-B input.
- IN1 etc** Selects an analogue input. These can be renamed.
- My Files** Plays music from your device over Wi-Fi.

### To rename a digital or analogue source, or PC

- Touch the ► icon to the right of the source you want to rename.

The following dialog box is displayed:



- Touch **Rename Source**.
- Enter the new name and touch **return**.



## BROWSING TRACKS

The **Browse** screen shows the folders and tracks on the selected device.

 
Note that you cannot browse on the Digital or Analogue inputs, or the PC source, since no track information is available.

### To play tracks

- Touch a track to play it immediately.

### To queue tracks

- Touch the ► icon to the right of the track, to display the **Choose Action** dialog box to allow you to choose what to do:

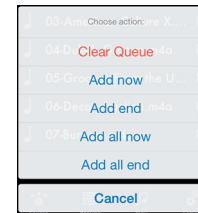

### Clear queue

Clears the Playqueue.

### Add now

Adds the track in place of the currently playing track.

### Add end

Adds the track to the end of the Playqueue.

### Add all now

Adds all the tracks in place of the currently playing track.

### Add all end

Adds all the tracks to the end of the Playqueue.

### To navigate back to the previous folder

- Touch < **Back** at top left of the screen.

### To search for tracks

- Touch the Search icon:



- Enter the text you want to search for.
- Touch **Search**.

A list of matching tracks will be displayed.



## USING THE PLAYQUEUE

- Touch **Playqueue** on the **Select Source** screen.

The **Playqueue** screen displays the list of tracks queued to play, and allows you to edit them. The currently playing track is indicated by a ► icon.

### To edit the Playqueue

- Touch the **Edit Queue** icon:



- Drag a track by the **Reorder** icon to move it in the Playqueue:



 
- Touch the **Delete** icon to delete a track from the Playqueue:



- Touch the **Edit Queue** icon again to finish.

### To clear or save the queue

- Touch the ► icon to the right of **Playqueue** on the **Select Source** screen.

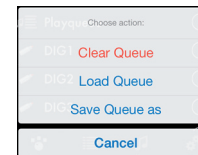

- Touch **Clear Queue** to clear the queue, or **Save Queue as** to save it.



## PLAY SCREEN

The **Play** screen allows you to control playback of the music in the queue.

- Touch the **Play** icon:

 


**Play**

- Touch **◀◀** or **▶▶** for the previous or next track. Press and hold for fast backwards or forwards.

### To change the volume

- Drag the volume slider at the bottom of the Play Screen.
- Tap the loudspeaker icons for small volume steps.

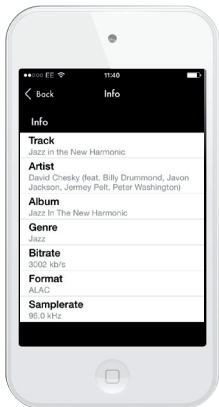

## INFO SCREEN

 
The **Info** screen displays detailed information about the currently playing track.

### To display the Info screen

- Click the Info icon on the **Play** screen:



# SELECTING A SOURCE

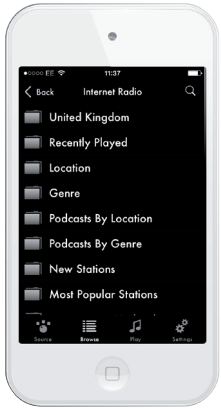

## PLAYING MUSIC FROM INTERNET RADIO

- Touch **Internet Radio** on the **Select Source** screen.

You can now browse a directory of stations, organised by location, genre, and popularity.

### To create a list of favourites

- On the **Internet Radio** screen touch **Get access code**, and note down the code.

- Connect to:

<http://primare.vtuner.com/setupapp/primare/asp/authlogin/RegForm.asp?ngy=eng>

- Follow the instructions to activate your account.

- Select your own Favorites.

Your favourites will appear in a folder on the Internet Radio screen called **\*My Favorites\***.

### To add a station that is not on the list

Enter the following information:

Station name

Station URL, for example, <http://62.168.116:8000/dsp1>

Location, for example Germany.

Genre, for example Classical

Type, for example MP3

 


## PLAYING MUSIC FROM A NETWORK SHARED MUSIC SOURCE

- Touch **Audio Server** on the **Select Source** screen.

Each network shared music source will be displayed as a folder, and you can browse for the music you want to play.

See *Browsing tracks*, page 5, for information about browsing and searching for music on a network shared music source.

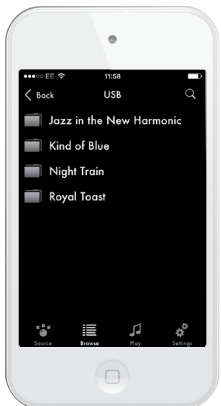


## PLAYING MUSIC FROM A USB DRIVE

- Touch **USB** on the **Select Source** screen.

The music on the USB drive will be displayed as a list of folders, and you can browse for the music you want to play.

 See *Browsing tracks*, page 5, for information about browsing and searching for music on a USB drive.

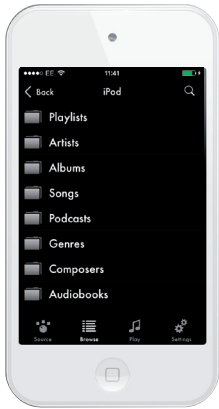


## PLAYING MUSIC FROM AN IPOD

- Connect the iPod, iPhone, or iPad to the USB-A input on the MM30, NP30, or PRE60, using an iPod USB lead.

You can then browse through the music on the iPod and select what you want to play.

See *Browsing tracks*, page 5, for information about browsing and searching for music on an iPod.

 
**My Files** on the **Select Source** screen will show the music on your device and allow you to play it over Wi-Fi.

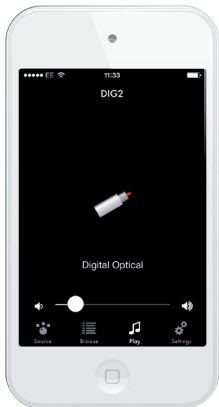

## PLAYING MUSIC FROM A DIGITAL OR ANALOGUE INPUT

- Connect the source to the appropriate digital or analogue input on your preamplifier.
- Touch the entry corresponding to the input on the **Select Source** screen.

 You can now play music from the chosen input.

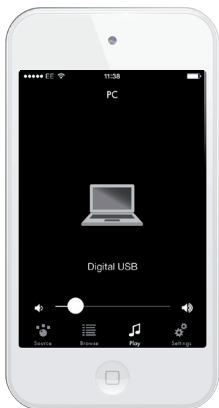

## PLAYING MUSIC FROM A PC/MAC

On a PC:

- Install the Primare PC audio driver from the support section on: [www.primare.net](http://www.primare.net)

No driver is needed on a Mac.

- Connect the PC/Mac USB connector to the USB-B input on the MM30, NP30, or PRE60, using a USB-A to USB-B lead.
- Select **XMOS USB Audio 2.0** in the **Sound Output** Control Panel or System Preferences panel.

- Touch **PC** on the **Select Source** screen.

You can now play music from your PC/Mac, using the MM30, NP30, or PRE60 as the soundcard of your PC/Mac.



# CONFIGURING SETTINGS



## SETTINGS SCREEN

The **Settings** screen allows you to see or change settings.

- Touch the **Settings** icon:



### Settings

#### Discover Devices

Searches for UPnP devices on the network.

#### Application Settings

 
Specifies settings for the Primare app; see below.

#### Device Settings

Allows you to configure the MM30, NP30, or PRE60; see below.

#### About

Displays the Primare app version information.

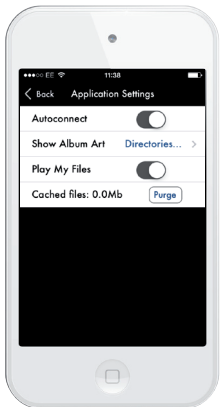

## APPLICATION SETTINGS

The **Application Settings** screen provides the following Primare App settings:

#### Autoconnect

Specifies whether to connect automatically to the last device.

#### Show Album Art

Specifies when to show album art for tracks.

#### Play My Files

Shows the **My Files** folder.

 
#### Purge

Clears the stored album art files.

### To choose when album art is displayed

- Touch **Show Album Art** on the **Application Settings** screen.

The following dialog box will be displayed:

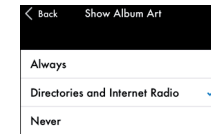

- Touch **Always** to show album art for tracks on all devices, **Directories and Internet Radio** to show album art for the **Internet Radio** and **Audio Server** options only, and **Never** to disable album art.



## DEVICE SETTINGS

The **Device Settings** screen provides the following MM30, NP30, or PRE60 settings:

#### Network

Allows you to configure the Wi-Fi and Ethernet settings.

#### Audio

 
Allows you to specify the maximum and default volume.

#### Control

Allows you to specify the IR Input location.

#### Firmware


Displays the firmware information, and allows you to check for and install updates.

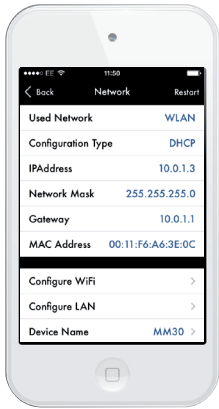

## NETWORK

The **Network** screen displays a summary of the current network settings, and provides the following MM30, NP30, or PRE60 settings:

 
- Configure WiFi** Displays the **WiFi Configuration** screen to allow you to configure the Wi-Fi settings; see below.
  - Configure LAN** Displays the **IP Configuration** screen to allow you to configure the Ethernet settings; see below.
  - Device Name** Allows you to assign a name to your Primare device.
- Touch **Restart** to restart the MM30, NP30, or PRE60 following a change to the network settings.

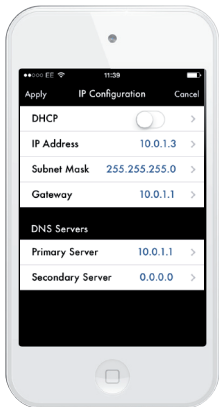

## IP CONFIGURATION

The **IP Configuration** screen provides the following MM30, NP30, or PRE60 settings:

 - DHCP** Enables or disables DHCP for the device. If DHCP is enabled, the other settings will be managed automatically by the network protocol.
- IP Address** The IP address of the MM30, NP30, or PRE60.
- Subnet Mask** The IP Subnet Mask.
- Gateway** The static default gateway address.
- Primary Server** The static primary Domain Name Server.
- Secondary Server** The static secondary Domain Name Server.

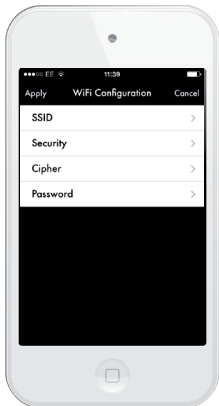

## WIFI CONFIGURATION

The **WiFi Configuration** screen provides the following MM30, NP30, or PRE60 settings:

- SSID** The name of your wireless network.
- Security** The type of wireless encryption used by the system. The options are: None, WEP, WPA, or WPA2.
- Cipher** The type of WPA encryption that is used. The options are TKIP, AES, or TKIP/AES.
- Password** The WiFi password.

# INDEX

## A

Album art, showing 9  
Analogue input 8  
Application Settings 9  
Audio Server 7  
Audio settings 9  
Autoconnect 9

## B

Browsing tracks 5

## C

Cipher 10  
Clearing the Playqueue 5  
Connecting 4  
Control 9

## D

Default volume 9  
Device Settings 9  
DHCP 10  
Digital input 8  
DNS servers 10

## F

Favourites, creating 7  
Firmware 9

## G

Gateway 10

## I

Info screen 6  
Inputs, playing music from 8  
Installing 4  
Internet Radio 7  
IP Address 10  
IP Configuration 10  
iPod 8

## M

Maximum volume 9  
My Files 4, 8

## N

Network 10  
Network shared music source 7

## P

Password 10  
PC/Mac, playing music from 8  
Play My Files 9  
Playqueue  
    Adding tracks 5  
    Clearing 5  
    Editing 5  
    Saving 5  
Play screen 6  
Purge 9

## Q

Queuing tracks 5

## R

Renaming a source 4

## S

Saving the Playqueue 5  
Searching for tracks 5  
Security 10  
Selecting a source 4  
Settings screen 9  
Show Album Art 9  
Sources  
    Renaming 4  
SSID 10  
Station, adding 7  
Subnet mask 10

## T

Tracks  
    Browsing 5  
    Information 6  
    Queuing 5  
    Searching 5

## U

USB drive 7

## V

Volume, changing 6

## W

WiFi Configuration 10



PRIMARE

PRIMARE AB  
LIMSTENSGATAN 7  
SE-21 616 LIMHAMN  
SWEDEN  
PRIMARE.NET